

三菱電機製 扇風機 形名順販売年度一覧表

形名	販売開始年
A30-IV	1981
C-130B	1950
C-140A	1956
C-140B	1960
C-140BC	1964
C140-BC3	1977
C140-BD	1972
C140-BD2	1976
C140-BD5	1978
C140-BD5-1	1979
C140-BE	1981
C140-NB	1996
C140-NBS	1997
C140-VB	2000
C140-VB-BK	2000
C140-WB	2005
C140-WB-BK	2005
C-26A	1954
C-36B	1950
C-36C	1957
C-52B	1949
C-56A	1957
C-90B	1956
C-90C	1961
C-90CC	1964
C90-CD	1972
C90-CD2	1976
C90-CD3	1977
C90-CD5	1978
C90-CD5-1	1979
C90-CE	1981
C90-NC	1996
C90-NC2	1997
C90-VC	2000
C90-VC-BK	2000
C90-WC	2005
C90-WC-BK	2005
CA-12S	1983
CD30A10BL	1977
CF30A	1971
CF30A10GR	1977
CF30A11B	1978
CF30A11G	1978
CF30A12BL	1979
CF30A12GR	1979
CF30A13B	1980
CF30A14B	1981
CF30A14G	1981
CF30A14P	1981
CF30A3BL	1971
CF30A3LG	1971
CF30A5BL	1973
CF30A5LB	1973
CF30A5LG	1973
CF30A6BL	1974
CF30A7BL	1975
CF30A8BL	1975
CF30B	1971
CF30B10BL	1977
CF30B10GR	1977
CF30B11BL	1978
CF30B11GR	1978
CF30B12BL	1979
CF30B12GR	1979
CF30B13G	1980
CF30B14B	1981
CF30B3BL	1972
CF30B3LB	1972
CF30B5BL	1973
CF30B5LB	1973

形名	販売開始年
CF30B5LG	1973
CF30B6BL	1974
CF30B6LG	1974
CF30B7BL	1975
CF30B7LG	1975
CF30B8BL	1976
CF30B8LG	1976
CF30K10BL	1977
CF30K10GR	1977
CF30K10LG	1977
CF30K11BK	1978
CF30K11BL	1978
CF30K12BK	1979
CF30K12BL	1979
CF30K12GR	1979
CF30K13A	1980
CF30K13B	1980
CF30K13G	1980
CF30K14B	1981
CF30K14G	1981
CF30K14P	1981
CF30K15B	1982
CF30K15G	1982
CF30K15P	1982
CF30K16B	1983
CF30K16G	1983
CF30K16P	1983
CF30K17B	1984
CF30K17P	1984
CF30K17R	1984
CF30K1GR	1978
CF30K6BL	1974
CF30K6LG	1974
CF30K7BL	1975
CF30K7LG	1975
CF30K8BL	1976
CF30K8LG	1976
CF30KR10B	1977
CF30R11B	1978
CF30R12B	1979
CF30R13B	1980
CF30R14B	1981
CF30R15B	1982
CF30R7BL	1975
CF30R8BL	1976
CF30T0BL	1977
CF30T10GR	1977
CF30T11BK	1978
CF30T11BL	1978
CF30T11GR	1978
CF30T12BL	1979
CF30T12GR	1979
CF30T13BL	1980
CF30T13GR	1980
CF30T14B	1981
CF30T14G	1981
CF30T14P	1981
CF30T15B	1982
CF30T15G	1982
CF30T15P	1982
CF30T16B	1983
CF30T16G	1983
CF30T16P	1983
CF30T17B	1984
CF30T17G	1984
CF30T17S	1984
CF30T18B	1985
CF30T18PI	1985
CF30T19B	1986
CF30T19PI	1986

形名	販売開始年
CF30T5BL	1973
CF30T5LB	1973
CF30T5LG	1973
CF30T6BL	1974
CF30T6LG	1974
CF30T7BL	1975
CF30T7LG	1975
CF30T8BL	1976
CF30T8LG	1976
CT-50DC	1961
CY-023	1989
CY-024	1989
CY-123	1996
CY-124	1996
CY-16A	1955
CY-16B	1957
CY-16C	1958
CY-22	1999
CY-301	2006
CY-302	2006
CY-30A	1959
CY-30AB	1961
CY-30AE	1962
CY-30AF	1963
CY-30B	1964
CY-30C	1967
CY-30C2	1970
CY30-C3	1972
CY30-C6	1978
CY30-C6B	1980
CY30-C6C	1980
CY30-C7	1982
CY30-C8	1986
CY30-C9	1988
CY30-D	1993
CY30-DN	1996
CY30-MD	1995
CY30-TD	1997
CY30-TD2	1999
CY30-V5	1976
CY30-WD	2006
CY30-WD 1	2010
CY-401	2006
CY-402	2006
CY-40A	1955
CY-40B	1956
CY-40C	1958
CY-40D	1960
CY-40DC	1962
CY-40DD	1963
CY-40E	1964
CY-40F	1967
CY-40F2	1970
CY40-F3	1972
CY40-F5	1976
CY40-F6	1977
CY40-F6B	1980
CY40-F6C	1980
CY40-F7	1982
CY40-F8	1986
CY40-F9	1988
CY40-G	1993
CY40-GN	1996
CY-40M	1959
CY40-MG	1994
CY40-TG	1997
CY40-TG2	1999
CY40-WG	2006
CY40-WG 1	2010
D-10B	1952

形名	販売開始年
D-10C	1955
D-10D	1955
D-10DB	1956
D-12A	1950
D-12B	1949
D-12C	1952
D-12D	1953
D-12E	1954
D-12F	1955
D-12G	1956
D-12GB	1956
D-12GD	1958
D-12H	1955
D-12K	1956
D-12KB	1956
D-12M	1958
D-16B	1949
D-16C	1953
D-20A	1963
D20-A2	1964
D20-A5	1965
D20-A8	1972
D20-AC	1974
D20-AE	1975
D20-AG2	1976
D20-AG5	1977
D20-AS	1979
D20-AS	1979
D20-AS2A	1979
D20-ASA	1979
D20-AT	1981
D20-ATG	1980
D20-ATY	1980
D20-AV	1981
D20-AZ	1983
D-20E	1959
D-20EB	1959
D-20F	1960
D-20G	1961
D-20H	1961
D-20J	1962
D22-AG2	1977
D25C-A	1986
D-25DB	1959
D-25DC	1958
D-25E	1963
D25-E10	1970
D25-E2	1964
D25-E5	1965
D25-E6	1966
D25-E7	1967
D25-E8	1968
D25-E9	1969
D-25G	1961
D-25H	1960
D-25HB	1961
D305-J	1987
D30A-G	1984
D30A-J	1984
D30A-L	1984
D30B-G	1985
D30B-J	1985
D30B-L	1985
D30C-G	1986
D30C-J	1987
D30C-L	1985
D30D-S	1987
D30E-S	1988
D30-F	1963
D30-F2	1964

形名	販売開始年
D30-F3	1965
D30-F7	1966
D30-FB	1964
D30-G	1963
D30-G2	1964
D-30GB	1961
D-30GD	1959
D30-GT	1975
D30-GT2	1976
D30-GT3	1977
D30-GT5	1978
D30-GT5A	1978
D30-GTB	1980
D30-GTB2	1976
D30-GTB3	1977
D30-GTG	1980
D30-GTG3	1977
D30-GTG5	1978
D30-GTG5A	1978
D30-GTG5A	1979
D30-GTV	1975
D30-GTV2	1976
D30-GTV3	1977
D30-GTV5	1978
D30-GTV5A	1978
D30-GTW6	1979
D30-GV	1981
D30-GVG	1981
D30-GX	1982
D30-H	1963
D30-H10	1970
D30-H11	1971
D30-H12	1972
D30-H2	1964
D30-H5	1965
D30-H6	1966
D30-H7	1968
D30-H8	1969
D30-H9	1969
D30-HB	1973
D30-HB2	1973
D30-HC	1974
D30-HE	1975
D30-HG	1976
D30-J2	1967
D30-J3	1968
D30-J5	1969
D30-J6	1970
D30-J7	1971
D30-J8	1972
D30-JB	1973
D30-JC	1974
D30-JE	1975
D30-JG	1976
D30-JK	1977
D30-JK2	1977
D30-JP	1978
D30-JP2	1978
D30-JS	1979
D30-JS2	1979
D30-JS2A	1979
D30-JSA	1979
D30-JT	1981
D30-JTB	1980
D30-JTG	1980
D30-JTL	1980
D30-JV	1981
D30-JX	1982
D30-JY	1981
D30-JZ	1983

形名	販売開始年
D30-JZ2	1984
D30-K	1970
D-30K	1961
D30-LA	1972
D30-LB	1973
D30-LB2	1973
D30-LC	1974
D30-LC2	1974
D30-LE	1975
D30-LE2	1976
D30-LE3A	1978
D30-LG	1976
D30-LK	1977
D30-LK2	1977
D30-LP	1978
D30-LP2	1978
D30-LS	1978
D30-LS2	1979
D30-LSA	1979
D30-LSA2	1979
D30-LT	1981
D30-LTB	1980
D30LTG	1980
D30-LV	1981
D30-LX	1982
D30-LZ	1983
D-30M	1959
D-30N	1959
D30-P	1961
D-30P	1959
D-30R	1960
D-30RE	1961
D30-S	1971
D-30X	1962
D30-Z	1980
D30-ZV	1981
D30-ZX	1982
D31-HC2	1974
D-31NB	1959
D32-HC3	1975
D-32NC	1960
D-33NH	1961
D35-L	1963
D35-L2	1964
D35-L5	1965
D-40C	1959
D40C-P	1985
D40D-P	1988
D40-P	1963
D40-P10	1970
D40-P11	1971
D40-P12	1972
D40-P2	1964
D40-P5	1965
D40-P6	1966
D40-P7	1967
D40-P8	1968
D40-P9	1969
D40-PB	1973
D40-PC	1974
D40-PE	1975
D40-PG	1976
D40-PK	1977
D40-PP	1978
D40-PS	1979
D40-PT	1981
D40-PTB	1980
D40-PV	1981
D-8A	1950
D-8B	1950

形名	販売開始年
D-8C	1953
D-8D	1955
DM-10E	1958
DM-12A	1955
DM-12C	1953
DM-12GB	1956
DM-12GC	1956
DM-12GD	1958
DM-12HC	1958
DM-12L	1958
DM-14A	1955
DM-14D	1958
DM-14GB	1957
DM-16C	1955
DM-16E	1958
DM-16GB	1957
DM-25DC	1958
DM-25DD	1958
DM-25E	1959
DM-25EC	1959
DM-25F	1959
DM-25G	1960
DM-25K	1961
DM-30A	1969
DM-30GD	1958
DM-30GE	1958
DM-30GG	1958
DM-30GK	1958
DM-30GL	1958
DM-30HC	1959
DM-30HD	1959
DM-30L	1959
DM-30LC	1959
DM-30LD	1958
DM-30N	1959
DM-30NB	1959
DM-30NC	1960
DM-30NE	1961
DM-30NJ	1961
DM-30V	1962
DM-30W	1962
DM-35A	1960
DM-35D	1959
DM-35DB	1958
DM-35DC	1959
DM-35DE	1958
DM-35DF	1960
DM-35DG	1961
DM-35E	1962
DM-35F	1962
DM-35G	1962
DM-35GB	1962
DM-40E	1959
DM-40EC	1959
DM-40ED	1958
DM-40EE	1958
DM-40EG	1958
DM-40EJ	1961
DM-40EL	1961
DM-40F	1962
DM-40FB	1962
DM-40G	1962
DM-40GB	1962
DM-40H	1962
F-300AZBE	1991
F-300AZGY	1991
F-300BZB	1991
F-300BZC	1991
F-300K2S	1984
F-300K5B	1985

形名	販売開始年
F-300K5CP	1985
F-300K5G	1985
F-300KB	1983
F-300M2B	1988
F-300M2BE	1988
F-300M2BK	1988
F-300M3BK	1988
F-300M3BU	1988
F-300M5BU	1989
F-300M5GR	1989
F-300M5W	1989
F-300M6BK	1990
F-300M6BU	1990
F-300M6IB	1990
F-300MB	1986
F-300MPI	1986
F-300MW	1986
F-300X1B	1982
F-300X1G	1982
F-300X2B	1984
F-300X2G	1984
F-30R2S	1984
F-30RB	1983
F-A300L2GR	1988
F-A300L2W	1988
F-A300LB	1987
F-A300LR	1987
F-A300LW	1987
JC-24D	1995
JF-401	1996
JF-402	1996
K20-BT	1981
K20-BTG	1980
K20-BTP	1980
K20-BV	1981
K20-BZ	1984
K30A-C	1983
K30A-H	1983
K30A-R	1983
K30B-C	1985
K30B-R	1985
K30C-C	1986
K30C-R	1986
K30-CT	1981
K30-CTB	1980
K30-CTG	1980
K30-CV	1981
K30-CX	1982
K30-CZ	1983
K30D-C	1987
K30D-R	1987
K30E-C	1988
K30E-R	1988
K30F-Q	1989
K30F-R	1989
K30G-Q	1990
K30G-S	1990
K30H-Q	1991
K30H-S	1991
K30J-Q	1992
K30J-S	1992
K30-KQ	1993
K30-KS	1993
K30-LQ	1994
K30-MQ	1995
K30-MS	1995
K30-Q	1967
K30-Q2	1968
K30-Q3	1969
K30-Q5	1970

形名	販売開始年
K30-Q7	1971
K30-Q8	1972
K30-QB	1973
K30-QC	1974
K30-QE	1975
K30-QG	1976
K30-QK	1982
K30-QK	1977
K30-QP	1978
K30-QS	1979
K30-QV	1981
K30-QX	1982
K30-R	1969
K30-R2	1970
K30-R3	1971
K30-R5	1972
K30-RB	1973
K30-RB	1974
K30-RE	1975
K30-RG	1976
K30-RK	1977
K30-RP	1978
K30-RS	1979
K30-RTL	1980
K30-RV	1981
K30-RX	1982
K30-SG	1977
K30-SG2	1978
K30-SG3	1979
K30-ST	1981
K30-STG	1980
K30-SV	1981
K30-TQ	1997
K30-TQ2	1999
K30-TQ4	2000
K30-TS	1997
K30-TS2	1998
K30-TS3	1999
K30-TS4	2000
K30-UQ	2001
K30-US	2001
K30-WQ	2002
K30-WS	2002
K30-XQ	2006
K30-XS	2006
K30-XV	1982
K30-YQ	2010
K30-YS	2010
K35B-U	1985
K35D-U	1987
K35G-U	1990
K35J-U	1992
K35-KU	1993
K35-MU	1995
K35-UT	1981
K35-UTB	1980
K35-UX	1981
K35-UX	1982
P-10B	1956
P-10C	1957
P-20AC	1958
P-25C	1959
P306-BG	1985
P306-BP	1985
P308-BGY	1988
P-8A	1957
P-8AB	1957
PF-45HNH	1985
PF-45JKH	1985
PF-45JQH	1985

形名	販売開始年
PF-45JSH	1985
R-12A	1957
R-12AB	1958
R25-S	1963
R25-S2	1964
R25-S5	1965
R305-BR	1985
R305-WB	1986
R305-WG	1986
R308-BMB	1988
R-30AB	1959
R-30AC	1959
R-30AD	1958
R-30AE	2005
R30A-F	1984
R30A-H	1984
R30-AHR	2006
R30-AM	2006
R30-ANG	2007
R30-AR	2006
R30-ARG	2007
R30A-W	1984
R30B-H	1985
R30B-W	1985
R30B-X	1985
R30B-Y	1985
R-30C	1959
R-30C-E	1986
R-30C-F	1986
R-30C-H	1986
R-30C-W	1986
R-30C-X	1986
R-30D	1960
R-30D-K	1987
R30D-T	1987
R30-DT	1981
R30-DTG	1980
R30-DV	1981
R30D-W	1987
R30-DW	1986
R30D-X	1987
R30D-Z	1987
R-30E	1960
R-30EB	1961
R-30EC	1961
R30E-D	1988
R30E-EV	1981
R30E-WBU	1988
R30-EX	1982
R30-F	1979
R30-F2	1979
R30F-B	1989
R30-FB	1973
R30F-D	1989
R30-FTK	1980
R30-FTL	1980
R30-FV	1981
R30-FX	1982
R30F-Y	1989
R30-FZ	1983
R-30G	1961
R-30G-B	1990
R-30G-D	1990
R30-GL	1978
R30-GL2	1979
R30-GR	1978
R30-GR2	1979
R30-GX	1977
R30G-Y	1990
R-30H	1961

形名	販売開始年
R30H-B	1991
R30H-D	1991
R30-HRB	2001
R30-HRC	2002
R30-HRE	2004
R30-HRF	2005
R30-HRH	2007
R30-HRJ	2008
R30-HRK	2009
R30-HT	1981
R30-HTB	1980
R30-HTG	1980
R30-HV	1981
R30-HX	1982
R30H-Y	1991
R30-HY	1981
R30-HZ	1983
R-30J	1962
R30J-B	1992
R30J-D	1992
R30J-DDY	2020
R30J-DMY	2020
R30J-DS	2015
R30J-DT	2016
R30J-DU	2017
R30J-DV	2018
R30J-DW	2019
R30J-DZ	2018
R30J-HRL	2010
R30J-HRM	2011
R30J-HRN	2012
R30J-HRP	2013
R30J-HRR	2014
R30J-HRS	2015
R30J-HRT	2016
R30J-HRU	2017
R30J-HRV	2018
R30J-HRY	2020
R30J-HRW	2019
R30J-KSR7	2017
R30J-KSR8	2018
R30J-ML	2010
R30J-MM	2011
R30J-MN	2012
R30J-MP	2013
R30J-MR	2014
R30J-MS	2015
R30J-MT	2016
R30J-MU	2017
R30J-MV	2018
R30J-MW	2019
R30J-MY	2020
R30J-RL	2010
R30J-RM	2012
R30J-RN	2011
R30J-RP	2013
R30J-RR	2014
R30J-RS	2015
R30J-RT	2016
R30J-RU	2017
R30J-RV	2018
R30J-RW	2019
R30J-Y	1992
R30-KB	1993
R30-KF	1993
R30-KV	1981
R30-KW	1993
R30-LF	1994
R-30M	1962
R30-MA	2000

形名	販売開始年
R30-MB	2001
R30-MBEG	2001
R30-MBK	2001
R30-MC	2002
R30-MCEG	2002
R30-MCK	2002
R30-MD	2003
R30-ME	2004
R30-ME2	2005
R30-MF	2005
R30-MG	2006
R30-MGE3	2006
R30-MH	2007
R30M-HR	2012
R30M-HRB-W	2014
R30-MJ	2008
R30-MK	2009
R30-MV6D	2003
R30-MW	1995
R30-MX	1999
R30-NF	1996
R30-NW	1996
R30-RA	2000
R30-RB	2001
R30-RC	2002
R30-RD	2003
R30-RE	2004
R30-RF	2005
R30-RG	2006
R30-RH	2007
R30-RHV	2007
R30-RJ	2008
R30-RK	2009
R30-RX	1999
R30-SB	1985
R30-SB2	1986
R30-SF	1970
R30-SF5	1971
R30-SF6	1972
R30-SS	1970
R30-SX	1968
R30-SX2	1969
R30-SX3	1970
R30-SX5	1971
R30-T	1963
R30-T2	1964
R30-T5	1965
R30-TF	1997
R30-TW	1997
R30-U6	1966
R30-U7	1968
R30-U8	1969
R30-V	1963
R30-VF	1998
R30-VRH	2007
R30-VRJ	2008
R30-VT	1981
R30-VTK	1980
R30-VW	1998
R30-VX	1982
R30-W	1963
R30-W10	1971
R30-W11	1972
R30-W2	1964
R30-W5	1965
R30-W6	1966
R30-W7	1967
R30-W8	1968
R30-W9	1970
R30-WB	1973

形名	販売開始年
R30-WB-M	1973
R30-WD	1974
R30-WD2	1974
R30-WD3	1975
R30-WE	1975
R30-WE2	1975
R30-WG	1976
R30-WG3	1978
R30-WK	1977
R30-WK2	1977
R30-WP	1978
R30-WP2	1978
R30-WS	1979
R30-WS2	1979
R30-WT	1981
R30-WTB	1980
R30-WTG	1980
R30-WV	1981
R30-WX	1982
R30-WY	1981
R30-WZ	1983
R30-X	1963
R30-X10	1969
R30-X11	1970
R30-X12	1972
R30-X2	1964
R30-X3	1965
R30-X7	1966
R30-X8	1967
R30-X9	1968
R30-XB	1973
R30-XC	1974
R30-XE	1975
R30-XG	1976
R30-XK	1977
R30-XP	1978
R30-XS	1979
R30-XTB	1980
R30-XV	1981
R30-XX	1982
R30-XZ	1983
R30-YG	1976
R30-YK	1977
R30-YK2	1977
R30-YP	1978
R30-YP2	1978
R30-YS	1979
R30-YS2	1979
R30-YT	1981
R30-YTB	1980
R30-YTG	1980
R30-YV	1981
R30-Z10	1970
R30-Z3	1965
R30-Z6	1966
R30-Z7	1967
R30-Z8	1968
R30-Z9	1969
R310-BBE	1989
R310-BBK	1989
R35D-N	1987
R35G-N	1990
R35J-N	1992
R35-N2	1967
R35-N3	1968
R35-N5	1969
R35-N6	1970
R35-N7	1971
R35-N8	1972
R35-NB	1973

形名	販売開始年
R35-NC	1974
R35-NE	1975
R35-NG	1976
R35-NK	1977
R35-NP	1978
R35-NS	1979
R35-NT	1981
R35-NTB	1980
R35-NV	1981
R35-NX	1983
R35-SN	1969
R35-SN2	1970
R35-SN3	1971
R35-TV	1981
R35-TX	1984
R35-Y	1963
R35-Y10	1970
R35-Y2	1964
R35-Y5	1965
R35-Y6	1966
R35-Y7	1967
R35-Y8	1968
R35-Y9	1969
R40-ME	2004
R40-MJ	2008
R40-RA	2000
RM-25A	1959
RM-25AB	1960
RM-25B	1959
RM-25BB	1962
RM-30B	1959
RM-30CB	1960
RM-30F	1961
RM-30K	1962
RM-30L	1962
RM-35A	1959
RM-35AB	1960
RM-35AC	1961
RM-35B	1962
RM-35K	1962
S-16A	1952
S-16B	1953
S-16C	1956
S-16D	1957
S20-A6	1967
S20-A7	1970
S20-AB	1973
S20-AG	1976
S20-AG3	1977
S30-A	1963
S30-A2	1964
S-30A2	1966
S-30AC	1960
S-30B	1962
S30-K	1965
S40-B	1963
S40-B2	1964
S40C-M	1986
S-40D	1959
S40D-M	1987
S40G-M	1990
S40J-M	1992
S-40M	1966
S40-M2	1967
S40-M3	1968
S40-M4	1969
S40-M5	1970
S40-M6	1971
S40-M7	1972
S40-MB	1973

形名	販売開始年
S40-MC	1974
S40-ME	1975
S40-MG	1976
S40-MK	1977
S40-MP	1978
S40-MS	1979
S40-MT	1981
S40-MTB	1980
S40-MV	1981
S-60A	1961
SM-16E	1958
SM-40E	1958
SM-40EC	1959
SM-40EH	1958
SM-40EJ	1961
SM-40EL	1961
SM-40F	1962
SM-40GBL	1962
SM-40GH	1962
Z-30FB	1974
Z-30EC	1974
R30J-DDY	2020
R30J-DMY	2020
R30J-HRY	2020
R30J-MY	2020
R30J-RW	2019
R30J-DW	2019
R30J-HRW	2019
R30J-MW	2019