

三菱電機製 ブラウン管テレビ 形名順販売年度一覧表

カラーテレビ

形名	販売開始年
10CB-200E	1978
10CB-200E (R)	1978
10CB-200E (W)	1978
10CB-200E (X)	1978
10CB-200EW	1978
10CB-B10	1980
10CB-B10 (R)	1980
10CB-B10 (W)	1980
13CP-128U	1969
13CPS-136	1970
13CPS-138	1971
14C310	1983
14C310A	1983
14C310G	1983
14C310S	1985
14C311	1983
14C315	1983
14C320	1983
14C330	1983
14C350	1984
14C-HV11	1994
14C-KT1	1999
14CP-101	1975
14CP-101P	1976
14CP-101PK	1979
14CP-101PK (R)	1979
14CP-101PK (W)	1979
14CP-101PS	1978
14CP-101PS (R)	1978
14CP-111	1979
14CP-111P	1979
14CP-111S	1979
14CP-111S (R)	1977
14CP-111S (W)	1977
14CP-111SA	1979
14CP-111SA (R)	1978
14CP-111SA (W)	1978
14CP-111SK	1979
14CP-111SK (R)	1979
14CP-111SK (W)	1979
14CP-131KS	1979
14CP-131S (G)	1978
14CP-131S (R)	1978
14CP-13C	1973
14CP-13CR	1973
14CP-141	1977
14CP-141 (R)	1978
14CP-141 (W)	1978
14CP-141K	1979
14CP-141K (R)	1979
14CP-141K (W)	1979
14CP-141N	1980
14CP-141S	1977
14CP-141S (R)	1978
14CP-141S (W)	1978
14CP-15C	1973
14CP-15CR	1973
14CP-19P	1974
14CP-19PR	1974
14CP-19PS	1976
14CP-A20R	1979
14CP-A20R (G)	1979
14CP-A20R (R)	1979
14CP-A20R (W)	1979
14CP-A20W	1979
14CP-A20W (G)	1979

形名	販売開始年
14CP-A20W (X)	1979
14CP-A30R	1979
14CP-A30R (R)	1979
14CP-A30R (W)	1979
14CP-B20	1980
14CP-B20 (G)	1980
14CP-B20 (R)	1980
14CP-B20 (W)	1980
14CP-B22	1980
14CP-B24T	1980
14CP-B24TS	1981
14CP-B24TS (R)	1981
14CP-B24TS (W)	1981
14CP-B30	1980
14CP-B30 (R)	1980
14CP-B30 (W)	1980
14CP-C20	1981
14CP-C20 (G)	1981
14CP-C20 (R)	1981
14CP-C20 (W)	1981
14CP-C22	1981
14CP-C23T	1981
14CP-C23T (G)	1982
14CP-C23T (R)	1981
14CP-C23T (W)	1981
14CP-C23T (X)	1982
14CP-C28W	1981
14CP-C30	1981
14CP-C30 (R)	1981
14CP-C30 (W)	1981
14CP-D20	1983
14CP-D20 (G)	1982
14CP-D20 (R)	1982
14CP-D20 (W)	1982
14CP-D20S	1983
14CP-D21T	1983
14CP-D30	1983
14CP-D30 (R)	1982
14CP-D30 (W)	1982
14CP-D30S	1983
14C-R1	1996
14C-R11	1998
14C-R4	2004
14CT-10F	1975
14CT-10FS	1975
14CT-11A	1972
14CT-11AR	1972
14CT-11AS	1972
14CT-11ASR	1972
14CT-121	1976
14CT-12A	1972
14CT-12A (R)	1972
14CT-12AS	1972
14CT-12AS (R)	1972
14CT-12P	1974
14CT-131	1977
14CT-131 (G)	1977
14CT-131 (R)	1977
14CT-131 (W)	1977
14CT-131K	1979
14CT-131K (G)	1979
14CT-131S	1977
14CT-131S (G)	1978
14CT-131S (W)	1978
14CT-14F	1975
14CT-14FS	1975

形名	販売開始年
14CT-151FM	1977
14CT-158	1977
14CT-161T	1978
14CT-161T (R)	1978
14CT-161T (W)	1978
14CT-161TK	1979
14CT-161TK (R)	1979
14CT-161TK (W)	1979
14CT-162TK	1980
14CT-162TK (R)	1979
14CT-162TK (W)	1979
14CT-16C	1973
14CT-16CR	1973
14CT-171T	1977
14CT-171TS	1977
14CT-17P	1974
14CT-18P	1975
14CT-335	1963
14CT-B24TW	1981
14CT-C28TZ	1981
14CT-D25T	1982
14CT-D27V	1982
14CT-D38W	1982
14CTS-156	1971
14CTS-156R	1971
14CTS-158	1972
14C-VG22	1999
14C-VK22	1999
15C312	1984
15C312R	1984
15C312S	1985
15C312X	1984
15C316	1986
15C331	1985
15C332	1984
15C332B	1984
15C333	1985
15C334	1986
15C334X	1986
15C335	1987
15C335 (BK)	1987
15C336	1987
15C336BK	1987
15C360	1984
15C381	1985
15C383	1986
15C-FK1	2000
15C-H2	1988
15C-H2S	1989
15C-H3	1991
15C-H5	1992
15C-H6	1993
15C-M1	1988
15C-M1 (BK)	1988
15C-M1 (R)	1988
15C-M10	1992
15C-M11	1993
15C-M3	1989
15C-M5	1990
15C-M6	1991
15CP-323U	1969
15C-SS10	1992
15C-SS2	1988
15C-SS3	1989
15C-SS5	1990
15C-SS6	1991

三菱電機製 ブラウン管テレビ 形名順販売年度一覧表

カラーテレビ

形名	販売開始年
15CT-203	1967
15CT-204	1968
15CT-204U	1968
15CT-223U	1970
15CT-323U	1969
15C-TM33	2000
15C-TM33P	2000
15T-M4	2004
15T-MV01	2001
15T-MV4	2004
15T-VK01	2001
15T-VZ1	2001
16CT-20A	1972
16CT-20A (R)	1972
16CT-20C	1973
16CT-21C	1973
16CT-21P	1974
16CT-21PS	1974
16CT-22P	1974
16CT-303	1975
16CT-303P	1976
16CT-313	1977
16CT-313K	1979
16CT-313S	1977
16CT-313SA	1978
16CT-313TK	1979
16CT-333T	1977
16CT-333TK	1979
16CT-333TKS	1979
16CT-333TS	1977
16CT-385	1964
16CT-395	1965
16CT-A40R	1979
16CT-C40	1981
16CT-C43T	1981
16CT-C45T	1981
16CT-C54T	1981
17CK-528U	1969
17CK-538	1970
17CKS-539	1971
17CT-325	1961
17CT-523U	1969
17CT-583	1970
17CTS-331	1972
17CTS-525	1970
17CTS-529	1971
18C520	1983
18C530	1983
18CK-41CT	1973
18CK-41PT	1974
18CK-41PTS	1974
18CK-C60W	1981
18CK-D60W	1982
18CT-30A	1972
18CT-30A (R)	1972
18CT-30AS	1972
18CT-30N	1975
18CT-31A	1972
18CT-31A (R)	1972
18CT-32C	1973
18CT-32CS	1975
18CT-33CM	1974
18CT-34C	1973
18CT-35P	1974
18CT-37P	1974
18CT-37PS	1974

形名	販売開始年
18CT-39F	1975
18CT-39FS	1976
18CT-40C	1973
18CT-41CT	1973
18CT-41PT	1973
18CT-41PTS	1973
18CT-45P	1974
18CT-505	1975
18CT-505S	1976
18CT-515	1975
18CT-535	1976
18CT-536	1976
18CT-536P	1977
18CT-543T	1979
18CT-545T	1976
18CT-545TN	1978
18CT-545TS	1977
18CT-546T	1978
18CT-546T (W)	1979
18CT-546TS	1979
18CT-555	1976
18CT-560TM	1977
18CT-561TM	1977
18CT-562ETM	1978
18CT-562N	1980
18CT-565	1978
18CT-565K	1979
18CT-576M	1977
18CT-578FM	1977
18CT-579T	1978
18CT-579TN	1978
18CT-595M	1977
18CT-598EM	1978
18CT-A53T	1979
18CT-A56D	1979
18CT-A65N	1979
18CT-A65W	1979
18CT-B52T	1980
18CT-B54T	1980
18CT-B62W	1980
18CT-B62WAT	1980
18CT-B64W	1980
18CT-C45T	1981
18CT-C50N	1981
18CT-C51T	1981
18CT-C51TG	1982
18CT-C54TZ	1981
18CT-C55T	1981
18CT-C55TV	1982
18CT-C64W	1981
18CT-D54T	1982
18CT-D58W	1979
18CT-D60W	1979
18CT-D68W	1979
18CTS-531	1971
19C512	1984
19C512S	1985
19C516	1986
19C532	1984
19C532B	1984
19C533	1985
19C534	1986
19C536	1987
19C537	1987
19C561	1984
19C581	1985

形名	販売開始年
19C581X	1985
19C582	1984
19C583	1986
19C584	1986
19CK-140	1967
19CK-140S	1967
19CK-550S	1967
19CK-603	1968
19CK-604	1968
19CK-650	1965
19CK-803	1967
19CK-804	1967
19CK-805	1968
19CK-806	1968
19CK-806S	1968
19CK-806SU	1968
19CK-806U	1968
19CK-815	1968
19CK-815U	1968
19CK-816	1968
19CK-816S	1968
19CK-816SU	1968
19CK-822	1970
19CK-823	1969
19CK-823U	1969
19CK-828	1969
19CK-828U	1969
19CK-829SU	1970
19CK-829U	1969
19CK-921U	1969
19CK-922SR	1970
19CK-922SU	1970
19CK-922U	1969
19CK-923U	1970
19CKS-925	1971
19CL-704	1968
19CL-704U	1968
19CL-902U	1968
19CL-936	1970
19C-M2	1988
19C-M3	1989
19C-M5	1990
19C-SS2	1988
19C-SS3	1989
19C-SS5	1990
19CT-550	1967
19CT-603	1967
19CT-604	1968
19CT-604U	1968
19CT-623	1969
19CT-623U	1969
19CT-703	1967
19CT-723U	1969
19CT-936	1970
20C630	1983
20C630L	1983
20CK-60A	1972
20CK-60A (R)	1972
20CK-60A (W)	1972
20CK-60AS	1972
20CK-60CW	1973
20CK-61A	1972
20CK-62C	1973
20CK-707	1975
20CK-70A	1972
20CK-70AS	1972

三菱電機製 ブラウン管テレビ 形名順販売年度一覧表

カラーテレビ

形名	販売開始年
20CK-808	1975
20CK-80A	1972
20CK-80A(R)	1972
20CK-80CM	1973
20CK-818E	1976
20CK-81C	1973
20CK-82C	1973
20CK-838	1976
20CK-838P	1976
20CK-852M	1978
20CK-858T	1977
20CK-858TM	1977
20CK-86P	1975
20CK-90A	1972
20CK-90A(R)	1972
20CK-90AE	1972
20CK-90AS	1972
20CK-90C	1973
20CK-91AE	1972
20CK-92CE	1973
20CK-93PE	1975
20CK-95P	1974
20CK-95PS	1974
20CK-96P	1972
20CK-96PS	1972
20CK-C80W	1981
20CK-C80W(X)	1981
20CK-D80W	1982
20CK-D81W	1982
20CK-D88W	1980
20CKS-631	1971
20CKS-831	1971
20CKS-837	1970
20CKS-838	1976
20CKS-851	1971
20CKS-851(EW)	1971
20CKS-851(R)	1971
20CKS-851(W)	1971
20CKS-851E	1971
20CKS-928	1971
20CKS-928(R)	1971
20CKS-933	1970
20CKS-933R	1970
20CKS-934	1971
20CKS-937	1970
20CKS-937	1971
20CKS-956	1971
20CKS-956S	1971
20C-MK1	2000
20CT-50A	1972
20CT-50A(R)	1972
20CT-50C	1973
20CT-51C	1973
20CT-52P	1974
20CT-707	1975
20CT-717	1976
20CT-727T	1976
20CT-737	1976
20CT-747	1977
20CT-747M	1977
20CT-757K	1979
20CT-760TM	1977
20CT-761TM	1977
20CT-762ETM	1978
20CT-777M	1978
20CT-777MS	1979

形名	販売開始年
20CT-777T	1979
20CT-787M	1977
20CT-A74T	1979
20CT-A76D	1979
20CT-A78F	1979
20CT-A85W	1979
20CT-A86W	1979
20CT-A97T	1979
20CT-B73T	1980
20CT-B75TZ	1980
20CT-B82W	1980
20CT-B83W	1980
20CT-B84W	1980
20CT-B88W	1980
20CT-C80W	1981
20CT-C84W	1981
20CT-D74T	1982
20CT-D77W	1982
20CT-D77WX	1982
20CT-D88W	1982
20CTS-631	1971
20C-VK22	2000
20C-VK3	2002
20W-HV12	1995
20W-TS1	1994
20W-TS2	1995
20W-TS3	1966
20W-VD1	1995
21C632	1990
21C633	1985
21C635	1987
21C635(BK)	1987
21C635(WH)	1987
21C660	1983
21C660F	1984
21C661	1984
21C662	1986
21C670	1988
21C675	1983
21C675P	1983
21C680	1983
21C681	1985
21C683	1986
21C684	1986
21C690D	1985
21C694	1987
21C-AX1	1989
21C-BM1	1991
21C-BM10	1992
21C-FK1	2000
21C-FK2	2001
21C-FK5	2002
21C-FK6	2003
21C-FK7	2004
21C-G50	1982
21C-H3	1991
21C-HV10	1993
21C-HVS10	1993
21C-JFA2	2002
21C-L33	2000
21C-LA22-N	1999
21C-LA33	2001
21C-LK22	1999
21C-M1	1984
21C-M10	1992
21C-M3	1989

形名	販売開始年
21C-M5	1990
21C-M6	1991
21C-MT1	2001
21C-S11	1998
21C-S11A	1999
21C-S50	1997
21C-SS1	1987
21C-SS10	1992
21C-SS2	1988
21C-SS20	1994
21C-SS3	1989
21C-SS30	1995
21C-SS5	1990
21C-SS6	1991
21C-SZ3	1994
21CT-810	1960
21CT-830	1960
21C-VG11	1998
21C-VG11-S	2000
21C-VK22	2001
21C-VK3	2002
21T-D101	2001
21T-D102	2002
21T-D103	2003
21T-D104	2004
21T-FK5	2002
21T-JFA2	2002
21T-JFA3	2003
21T-JFA4	2004
21T-M01	2001
21T-M4	2004
21T-MD1	2001
21T-MV01	2001
21T-MV4	2004
21T-VK01	2001
21T-VZ1	2001
22CK-110PT	1974
22CK-909T	1975
22CK-909TS	1976
22CK-919T	1976
22CK-B94W	1980
22CK-C90W	1981
22CK-D90W	1987
22CT-100P	1975
22CT-939TM	1977
22CT-939TMA	1978
22CT-939TMK	1979
22CT-939TMS	1978
24W-HV12	1995
24W-TB2	1995
24W-TB3	1996
24W-TS1	1994
24W-TS2	1995
24W-TS3	1996
25C781G	1985
25C784	1986
25C792	1986
25C793	1987
25C794	1987
25C-A3Z	1989
25C-A5Z	1990
25C-A5Z(V)	1991
25C-A6Z	1991
25C-AP1	1991
25C-AT1	1988
25C-AT1G	1988

三菱電機製 ブラウン管テレビ 形名順販売年度一覧表

カラーテレビ

形名	販売開始年
25C-AT2	1989
25C-AT3	1989
25C-AT5	1990
25C-AT5(V)	1991
25C-AT6	1991
25C-AT91	1988
25C-AT92	1989
25C-AT93	1989
25C-AX1	1989
25C-AZ1	1988
25C-B55	1988
25C-BA11	1998
25C-BA5	1990
25C-BA5(V)	1991
25C-BA95	1990
25C-BA95(V)	1991
25C-BK1	1994
25C-BK55	1998
25C-BM1	1991
25C-BS1	1993
25C-BS5Z	1990
25C-BS5Z(V)	1991
25C-BZ1	1991
25C-CZ100	1992
25C-DA1	1988
25C-DA2	1989
25C-EA10	1993
25C-EX1	1992
25C-EX12	1993
25C-EZ1	1992
25C-FA22	1999
25C-FA33	2000
25C-FK1	2000
25C-FK2	2001
25C-FK5	2003
25C-FK6	2003
25C-FK7	2004
25C-LA22	1999
25C-LA33	2000
25C-LK22	1999
25C-LS700	1999
25C-PZ1	1991
25C-S20	1994
25C-S30	1995
25C-S50	1997
25C-S55	1998
25C-SA1	1993
25C-SA11	1998
25C-SA2	1994
25C-SS1	1987
25C-ST88	1998
25C-SX1	1992
25C-SZ1	1992
25C-SZ3	1994
25C-X20	1994
25C-X30	1995
25C-X50	1997
25C-XA1	1993
25C-XA11	1998
25C-XA2	1994
25C-ZX1	1994
25C-ZX2	1994
25C-ZX20	1994
25T-D101	2001
25T-D101S	2001
25T-D102	2002

形名	販売開始年
25T-D102S	2002
25T-D103	2003
25T-D103S	2003
25T-D104	2004
25T-D104S	2004
25T-JFA2	2002
25T-JFA3	2003
25T-JFA4	2004
25T-SY01	2001
25T-SY2	2002
25T-SY3	2003
25T-SY4	2003
25T-SY5	2004
25T-VA1	2001
25T-VA1S	2001
26C860	1984
26C890	1991
26C-919TM	1977
26CK-C95W	1981
26CK-D95W	1987
26CT-948M	1978
26CT-949TM	1977
26CT-989DM	1978
26CT-A97T	1979
26CT-B98W	1980
26CT-C95W	1981
26CT-C97T	1981
27C894	1987
27C-AT1	1988
27C-AT2	1989
27C-AT3	1989
27C-AZ1	1988
28C861	1989
28C862	1986
28C862U	1988
28C881	1985
28C884	1986
28C890	1984
28C891	1985
28C892	1986
28C893	1987
28F-D401S	2001
28T-BS105	2005
28T-D101S	2001
28T-D102S	2002
28T-D103S	2003
28T-D104S	2004
28T-D105S	2005
28T-D301	2001
28T-D302S	2002
28T-D303S	2003
28T-FK7	2004
28T-JFS3	2003
28T-JFS4	2004
28T-SY3S	2002
28T-SY4S	2003
28T-SY5S	2004
28T-TB4	2004
28T-BF11	1999
28W-BF2	1996
28W-BF5	1997
28W-BK55	1998
28W-BS11	1998
28W-BS5	1997
28W-BZ1	1994
28W-BZ2	1996

形名	販売開始年
28W-CX10	1996
28W-CZ10W	1996
28W-CZ11	1998
28W-CZ20W	1997
28W-CZ22	1999
28W-CZ5	1992
28W-CZ55	1993
28W-CZ66	1994
28W-CZ7	1995
28W-CZ77	1995
28W-FK22	2000
28W-FK3	2001
28W-FK5	2003
28W-FK6	2004
28W-FK7	2004
28W-HR1	2000
28W-JF1	1995
28W-JF2	1996
28W-MM1	1996
28W-MX1	1995
28W-RA1	2000
28W-TB1	1994
28W-TS1	1994
28W-XA22	1999
28W-XA33	2001
29C994	1987
29C-A3Z	1989
29C-A5Z	1990
29C-AP1	1991
29C-AP12	1991
29C-AT1	1988
29C-AT1BS	1988
29C-AT1G	1988
29C-AT2	1989
29C-AT3	1989
29C-AT5	1990
29C-AT6	1991
29C-AT81	1988
29C-AT91	1988
29C-AT92	1989
29C-AT93	1989
29C-AZ1	1988
29C-B55	1998
29C-BA1	1990
29C-BA11	1998
29C-BA5	1990
29C-BA95	1990
29C-BK1	1994
29C-BK55	1998
29C-BM1	1991
29C-BS1	1993
29C-BS5Z	1990
29C-BZ1	1991
29C-CZ1	1987
29C-CZ100	1992
29C-CZ2	1988
29C-CZ3	1989
29C-CZ303	1989
29C-CZ505	1990
29C-DA2	1989
29C-EA10	1993
29C-EX1	1992
29C-EX12	1993
29C-EZ1	1992
29C-FA22	1999
29C-FA33	2000

三菱電機製 ブラウン管テレビ 形名順販売年度一覧表

カラーテレビ

形名	販売開始年
29C-FK2B	2001
29C-FK5B	2002
29C-FK6B	2003
29C-FR220	1999
29C-LA22	1999
29C-LA33	2000
29C-PZ1	1991
29C-SA1	1993
29C-SS1	1987
29C-SS1L	1988
29C-SX1	1992
29C-SY01	2001
29C-VA1S	2001
29C-X20	1994
29C-X20N	1994
29C-X50	1997
29C-XA1	1993
29C-XA11	1998
29C-XA2	1994
29C-XZ11	1998
29C-ZX1	1994
29C-ZX2	1994
29T-BS105	2005
29T-D101	2001
29T-D101S	2001
29T-D102	2002
29T-D102S	2002
29T-D103	2003
29T-D103S	2003
29T-D104	2004
29T-D104S	2004
29T-D105	2005
29T-D105S	2005
29T-JFS2	2002
29T-JFS3	2003
29T-JFS4	2004
29T-SY01	2001
29T-SY2	2002
29T-SY3	2003
29T-SY4	2003
29T-SY5	2004
29T-VA1	2001
29T-VA1S	2001
31C-AT5	1990
31C-BA5	1990
31C-BS5Z	1990
31C-CZ303	1989
31C-CZ505	1990
31C-DX1	1991
31C-DX12	1991
31C-DX2	1992
32D-HD3	1996
32D-HX1	2000
32F-BD401	2001
32F-BD402	2002
32F-D401S	2001
32T-D302S	2002
32T-D303S	2003
32T-GD303	2003
32T-JFD3	2003
32T-SY5	2003
32W-BS50	1997
32W-CX10	1996
32W-CX20W	1997
32W-CZ10W	1996
32W-CZ20WM	1997

形名	販売開始年
32W-CZ6	1994
32W-CZ66	1994
32W-CZ7	1995
32W-HR1	2000
32W-JF1	1995
33C953	1987
33C-AP1	1991
33C-AZ1	1988
33C-AZ1S	1989
33C-BA5	1990
33C-BA5S	1991
33C-CZ1	1987
33C-CZ100	1992
33C-CZ11	1991
33C-CZ2	1988
33C-CZ3	1989
33C-CZ303	1989
33C-CZ505	1990
36C-WA1	1991
36D-HD2	1993
36D-HD5	1997
36F-BD401	2001
36F-BD402	2002
36F-D401S	2001
36W-CA20	1997
36W-CX10	1996
36W-CX11	1998
36W-CX20W	1997
36W-CZ10W	1996
36W-CZ11	1998
36W-CZ20WM	1997
36W-CZ22	1999
36W-CZ55	1993
36W-CZ6	1994
36W-CZ7	1995
36W-JF1	1995
37C894	1987
37C960	1989
37C962	1986
37C963	1987
37C-AZ1	1988
37C-AZ1G	1988
37C-CZ1	1987
37C-CZ2	1988
37C-CZ2E	1989
37C-CZ3	1989
37C-CZ303	1989
37C-CZ505	1990
37C-CZ70	1991
37C-DX1	1991
37C-DX11	1998
37C-DX2	1992
37C-DX50	1997
6CB-D12	1982
6CT-333	1963
6CT-338	1965
SCT-M10	1980
SCT-M14	1981
SCT-M20	1979
SCT-M201	1982
SCT-M26	1981

三菱電機製 ブラウン管テレビ 形名順販売年度一覧表

白黒テレビ

形 名	販売 開始年
5PB-1000	1978
6P-125	1962
6P-126	1966
9PS-2100	1967
9PS-2200	1969
9PS-2200U	1970
12P-3000	1970
12P-310	1964
12P-3100	1968
12P-3100U	1968
12P-315(B, R)	1965
12P-320	1963
12P-3300	1969
12P-3300U	1969
12P-375	1967
12P-4100	1967
12PS-195	1967
12PS-3030	1972
12PS-3050	1974
12PS-3050S	1975
12PS-3070	1975
12PS-3090(R)	1977
12PS-3090(W)	1977
12PS-3190(R)	1978
12PS-4100	1967
12T-300	1963
12T-365	1965
14P-130	1962
14PS-4000	1970
14PS-4010	1971
14PS-4020	1972
14PS-4030	1973
14PS-4030S	1976
14PS-4200	1968
14PS-4300	1969
14PS-4300U	1969
14PS-4400	1968
14PS-4400U	1968
14PS-4500	1969
14PS-4500U	1969
14PS-4600AU	1969
14PS-4600U	1969
14PS-4700	1970
14T-100	1960
14T-120	1961
14T-160(M)	1959
14T-170(M)	1959
14T-200	1962
14T-260(A)	1959
14T-350	1960
14T-400	1961
14T-450	1959
14T-560	1958
14T-580	1958
14T-600	1958
14T-620	1960
14T-700(B)	1958
14T-790	1960
14T-800	1960
14T-880	1961
14T-930	1960
14T-950	1961
14T-980	1960
14T-990	1960
16P-5100	1968
16P-5100U	1968

形 名	販売 開始年
16T-230(U)	1963
16T-240	1964
16T-250(S)	1966
16T-280	1962
16T-290	1965
16T-5500(G)	1967
16T-6500	1968
16T-6500U	1968
16T-660	1967
16T-6600U	1969
16T-670	1963
16T-710	1963
16T-730	1963
16T-770	1964
16T-780(A)	1965
16T-840	1962
16T-850(S)	1966
16T-860	1963
16T-900(M)	1963
16T-910	1962
16T-960	1962
17PS-5200U	1970
17PS-5300U	1969
17T-110	1960
17T-180	1958
17T-180E	1958
17TS-6700	1969
17TS-6700U	1969
17TS-6900	1970
17TS-6900S	1970
19K-820	1964
19K-821	1965
19K-825	1965
19K-870	1966
19K-9100	1968
19K-9100U	1968
19K-920	1966
19K-970	1967
19L-890	1967
19T-370	1963
19T-390	1964
19T-460	1967
19T-480	1966
19T-530	1964
19T-540	1964
19T-630	1962
20KS-9300U	1969
20T-7100	1968
20T-7100U	1969
20TS-7300U	1969
21K-680	1959
21T-220	1960