

6 三菱電力量計の機種変遷(普通級のみ)

1. 単独計器(発信装置なし)

取付・接続方式	相線式	定格電流	西暦																																																					
			70	75	80	85	90	95	00	05	10	15	20	令和																																										
			昭和																																																					
			平成																																																					
			43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31(1)	2	3
表面形 (表面取付 表面接続)	単相 2線式	30A以下	ME-E1 → MF-70 → MF-80 → M1B → M1LM → M1PM-R																																																					
		120A以下	MF-75 → MF-80G → M1B → M1LM → M1PM-R																																																					
	単相 3線式	30A以下	MU → MU-70 → MU-80E → M2B → M2LM → M2PM-R																																																					
		120A以下	MU → MU-70 → MU-80GE → M2B → M2LM → M2PM-R																																																					
	三相 3線式	30A以下	MU → MU-70 → MU-80 → M2B → M2LM → M2PM-R																																																					
		120A以下	MU → MU-70 → MU-80G → M2B → M2LM → M2PM-R																																																					
	三相 4線式	30A以下	YU-70 → MH-80 → M3B → M3LM → M3PM-R																																																					
		120A以下	M3B → M3LM → M3PM-R																																																					

2. 単独計器(発信装置付・通信機能付)

取付・接続方式	相線式	定格電流	西暦																																																					
			70	75	80	85	90	95	00	05	10	15	20	令和																																										
			昭和																																																					
			平成																																																					
			43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31(1)	2	3
表面形 (表面取付 表面接続)	単相 2線式	30A以下	MF-70L → MF-70K5 → MF-80K5 → MF-80K11 → M1B-K5 → M1B-K11 → M1LM-K5 → M1LM-K11, M1LM-K12R → M1PM-S34R																																																					
		120A以下	MF-75K2 → MF-75K5 → MF-80GK5 → MF-80GK11 → M1B-K5 → M1B-K11 → M1LM-K5 → M1LM-K11, M1LM-K12R → M1PM-S34R																																																					
		30A以下	MF-70L → MU-70K5 → MU-80EK5 → MU-80EK11 → M2B-K5 → M2B-K11, M2B-K12R → M2LM-K5 → M2LM-K11, M2LM-K12R → M2PM-S34R																																																					
			MU-70K2 → MU-70K5 → MU-80GEK5 → MU-80GEK11 → M2B-K5 → M2B-K11, M2B-K12R → M2LM-K5 → M2LM-K11, M2LM-K12R → M2PM-S34R																																																					
	単相 3線式	30A以下	MU-70L → MU-70K5 → MU-80K5 → MU-80K11 → M2B-K5 → M2B-K11, M2B-K12R → M2LM-K5 → M2LM-K11, M2LM-K12R → M2PM-S34R																																																					
		120A以下	MU-70K2 → MU-70K5 → MU-80GEK5 → MU-80GEK11 → M2B-K5 → M2B-K11, M2B-K12R → M2LM-K5 → M2LM-K11, M2LM-K12R → M2PM-S34R																																																					
		250A以下	M8U-S32R → M8U-SN1R → M8U-SN2R → M8UM-S33R → M8UM-SN1R → M8UM-SN2R → M8FM-S1R, M8FM-N1LT(R), M8FM-N3LT(R)																																																					
		30A以下	MU-70L → MU-70K5 → MU-80K5 → MU-80K11 → M2B-K5 → M2B-K11, M2B-K12R → M2LM-K5 → M2LM-K11, M2LM-K12R → M2PM-S34R																																																					
	三相 3線式	30A以下	MU-70L → MU-70K5 → MU-80K5 → MU-80K11 → M2B-K5 → M2B-K11, M2B-K12R → M2LM-K5 → M2LM-K11, M2LM-K12R → M2PM-S34R																																																					
		120A以下	MU-70K2 → MU-70K5 → MU-80GK5 → MU-80GK11 → M2B-K5 → M2B-K11, M2B-K12R → M2LM-K5 → M2LM-K11, M2LM-K12R → M2PM-S34R																																																					
		250A以下	M8U-S32R → M8U-SN1R → M8U-SN2R → M8UM-S33R → M8UM-SN1R → M8UM-SN2R → M8FM-S1R, M8FM-N1LT(R), M8FM-N3LT(R)																																																					
		30A以下	YU-70K5 → MH-80K5 → M3B-K5 → M3B-K11, M3B-K12R → M3LM-K5 → M3LM-K11, M3LM-K12R → M3PM-S34R																																																					
三相 4線式	30A以下	YU-70K5 → MH-80K5 → M3B-K5 → M3B-K11, M3B-K12R → M3LM-K5 → M3LM-K11, M3LM-K12R → M3PM-S34R																																																						
	120A以下	MH-80K11 → M3B-K5, M3B-K11, M3B-K12R → M3LM-K5, M3LM-K11, M3LM-K12R → M3PM-S34R																																																						

※1. → は旧機種、→ は現行機種を表します。
 ※2. 網掛け部分は電子式電力量計です。



3.変成器組合せ計器(発信装置なし)

取付・接続方式	相線式	定格電流	西暦																																																					
			70	75	80	85	90	95	00	05	10	15	20	平成															令和																											
			43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31(1)	2	3
表面形 (表面取付 表面接続)	単相 2線式	5A	MF-72 → MF-80H → M1BH → M1LHM → M1PM-R																																																					
	単相 3線式		MU-70 → MU-80HE → M2BH → M2LHM → M2PM-R																																																					
	三相 3線式		MU-70 → MU-80H → M2BH → M2LHM → M2PM-R																																																					
	三相 4線式		YU-72 → MH-80H → M3BH → M3LHM → M3PM-R																																																					
埋込形 (埋込取付 背面接続)	単相 2線式		MF-72B → MF-80HV → M1BH-V → M1LHM-V → M1PM-VR																																																					
	単相 3線式		MU-70B → MU-80HEV → M2BH-V → M2LHM-V → M2PM-VR																																																					
	三相 3線式		MU-70B → MU-80HV → M2BH-V → M2LHM-V → M2PM-VR																																																					
	三相 4線式		YU-72B → MH-80HV → M3BH-V → M3LHM-V → M3PM-VR																																																					

4.変成器組合せ計器(発信装置付・通信機能付)

取付・接続方式	相線式	定格電流	西暦																																																					
			70	75	80	85	90	95	00	05	10	15	20	平成															令和																											
			43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31(1)	2	3
表面形 (表面取付 表面接続)	単相 2線式	5A	MF-72L → MF-72K5 → MF-80HK5 → MF-80HK11 → M1BH-K5 → M1BH-K11 → M1LHM-K5 → M1LHM-K11, M1LHM-K12R → M1PM-S34R																																																					
	単相 3線式		MU-70L → MU-70K5 → MU-80HEK5 → MU-80HEK11 → M2BH-K5 → M2BH-K11, M2BH-K12R → M2LHM-K5 → M2LHM-K11, M2LHM-K12R → M2PM-S34R																																																					
	三相 3線式		MU-70L → MU-70K5 → MU-80HK5 → MU-80HK11 → M2BH-K5 → M2BH-K11, M2BH-K12R → M2LHM-K5 → M2LHM-K11, M2LHM-K12R → M2PM-S34R																																																					
	三相 4線式		YU-72K2 → YU-72K5 → MH-80HK5 → MH-80HK11 → M3BH-K5 → M3BH-K11, M3BH-K12R → M3LHM-K5 → M3LHM-K11, M3LHM-K12R → M3PM-S34R																																																					
埋込形 (埋込取付 背面接続)	単相 2線式		MF-72BL → MF-72K5B → MF-80HK5V → MF-80HK11V → M1BH-K5V → M1BH-K11V → M1LHM-K5V → M1LHM-K11V, M1LHM-K12VR → M1PM-S34VR																																																					
	単相 3線式		MU-70BL → MU-70K5B → MU-80HEK5V → MU-80HEK11V → M2BH-K5V → M2BH-K11V, M2BH-K12VR → M2LHM-K5V → M2LHM-K11V, M2LHM-K12VR → M2PM-S34VR																																																					
	三相 3線式		MU-70BL → MU-70K5B → MU-80HK5V → MU-80HK11V → M2BH-K5V → M2BH-K11V, M2BH-K12VR → M2LHM-K5V → M2LHM-K11V, M2LHM-K12VR → M2PM-S34VR																																																					
	三相 4線式		YU-72K2B → YU-72K5B → MH-80HK5V → MH-80HK11V → M3BH-K5V → M3BH-K11V, M3BH-K12VR → M3LHM-K5V → M3LHM-K11V, M3LHM-K12VR → M3PM-S34VR																																																					