

**Mitsubishi Electric Corporation Industrial Robot**

# MELFA Technical News

BFP-A6079-0323E

April 2023

**Subject:** Discontinuation of production of F series industrial robots**Applicable to:** RV-F series, RH-F series  
(Controller CR750/751 series)

Thank you for your continued support of Mitsubishi industrial robot “MELFA”.  
Production of the following “RV-F/RH-F series” will be discontinued.

**1. Models to be discontinued**

- MELFA RV-F series  
RV-2F, RV-4F, RV-7F, RV-13F, RV-20F series
- MELFA RH-F series  
RH-3FH, RH-6FH, RH-12FH, RH-20FH, RH-3FHR series

The environment-resistant specifications, the special product and the option exclusively for these models(Table 2) will be also discontinued

**2. Schedule**

- Order acceptance: Through September 30,2023
- Production discontinuation: March 31,2024

**3. Repair acceptance**

- Repair acceptance: Through March 31,2031  
(For 7years after production discontinuation)

**4. Alternative Models**

The RV-FR/RH-FR series is available as an alternative to the RV-F/RH-F series.  
Consider replacing the F series with the FR series.

**5. Precautions for replacement**

Please refer to below technical news.

BFP-A6079-0190E

Precautions of replacement from MELFA F series D type robot to FR series D type robot.

Table1 **Discontinuation models and Alternative Models**

| Discontinuation models | Alternative Models     |
|------------------------|------------------------|
| RV-2F-D/Q series       | RV-2FR-D/Q series      |
| RV-4/7F-D/Q series     | RV-4/7FR-D/Q series    |
| RV-13/20F-D/Q series   | RV-13/20FR-D/Q series  |
| RH-3/6FH-D/Q series    | RH-3/6FRH-D/Q series   |
| RH-12/20FH-D/Q series  | RH-12/20FRH-D/Q series |
| RH-3FHR-D/Q series     | RH-3FRHR-D/Q series    |

Table2 **Discontinuation options**

&lt;Standard Robot options&gt;

| Name   | Type   | Remarks                         |
|--|--|---------------------------------|
| Machine cable<br>(replacement for shorter 2m type)     | 1S-02UCBL-01<br>1F-02UCBL-02   | CR750<br>CR751                  |
| Machine cable, for extension/fixed<br>(CR750)          | 1S-□□CBL-11<br>1S-□□CBL-01   | Exchange type<br>Extension type |
| Machine cable, for extension/fixed<br>(CR751)          | 1F-□□UCBL-11<br>1F-□□UCBL-02   | Exchange type<br>Exchange type  |
| Machine cable, for extension/flexible<br>(CR750)       | 1S-□□LCBL-11<br>1S-□□LCBL-01   | Exchange type<br>Extension type |
| Machine cable, for extension/flexible<br>(CR751)       | 1F-□□LUCBL-11<br>1F-□□LUCBL-02   | Exchange type<br>Exchange type  |
| Standard teaching pendant                              | R33TB(-**)   |                                 |
| High-function teaching pendant                         | R57TB(-**)   |                                 |
| Conversion cable for the teaching box                  | 2F-32CON03M  |                                 |
| Terminal block replacement tool for<br>the user wiring | 2F-CNUSR01M  |                                 |
| Controller protection box                              | CR750-MB<br>CR751-MB   | CR750<br>CR751                  |
| Force sensor set                                       | 4F-FS001-W200<br>4F-FS001-W1000  |                                 |
| Force sensor adapter                                   | 1F-FSFLG-01<br>1F-FSFLG-02   | RV-2/4/7F<br>RV-13/20F          |
| Safety Option  | 4F-SF001-01  |                                 |
| Instruction Manual (bookbinding)                       | 5F-RA01-PE01<br>5F-RB01-PE01<br>5F-RP01-PE01<br>5F-RE01-PE01<br>5F-FA01-PE01<br>5F-FB01-PE01<br>5F-FP01-PE01<br>5F-FE01-PE01 |                                 |

**MITSUBISHI ELECTRIC CORPORATION**

< The environment-resistant Robot options >

| Name   | Type   | Remarks                          |
|--|--|----------------------------------|
| Solenoid valve set                               | 1F-VD0□-04<br>1F-VD0□E-04<br>1F-VD0□-05<br>1F-VD0□E-05       | Sink<br>Source<br>Sink<br>Source |
| External wiring set 1 for the forearm            | 1F-HB01S-02  |                                  |
| External wiring set 2 for the forearm            | 1F-HB02S-02  |                                  |
| External wiring set 1 for the base               | 1F-HA01S-02  |                                  |
| External wiring set 2 for the base               | 1F-HA02S-02  |                                  |
| External user wiring and piping box              | 1F-UT-BOX-04<br>1F-UT-BOX-03                                 |                                  |
| Machine cable, for extension/fixd (CR751)        | 1F-□□UCBL-03   | Exchange type                    |
| Machine cable, for extension/flexible (CR751)    | 1F-□□LUCBL-03  | Exchange type                    |
| Stopper for changing the J1-axis operating range | 1F-DH-06<br>1F-DH-07<br>1F-DH-08<br>1F-DH-09<br>1F-DH-10     |                                  |
| Instruction Manual (bookbinding)                 | 5F-FF03-PE01<br>5F-RF03-PE01<br>5F-FB03-PE01<br>5F-RB03-PE01 |                                  |

<Application Package>

| Name                                   | Type                               | Remarks                                 |
|--|------------------------------------|---|
| Processing Machine Loading Application | APR-1ML●◆△-S11                     | Set product                             |
| Force-sense Applications               | AP10-AFS0●◆-E0<br>AP10-AS0SWFS-MA  | Set product<br>Software license product |
| Deburring/Polishing Application        | AP10-BRP0■▲-E0<br>AP10-BRP0SWFS-MA | Set product<br>Software license product |